

BT Remote Connection Diagram

INV TERMINALS ARE CONNECTED TO THE NORMALLY OPEN RELAY OUTPUT THEY PARALLEL THE RJ-10 OUTPUT PORT IF ENABLED. THE INV TERMINALS ARE ALWAYS CONNECTED. EITHER THE INV TERMINALS OR THE RJ-10 OUTPUT POINTS SHOULD BE USED NOT BOTH!

